

THERMOPPOINT

TM / J-500 / 600
Multipoint temperature transmitters

User's and Programming manual

2nd edition

Manufacturer:

NIVELCO Process Control Co.

H-1043 Budapest, Dugonics u. 11.

Phone: (36-1) 889-0100 ■ Fax: (36-1) 889-0200

E-mail: sales@nivelco.com ■ www.nivelco.com





CONTENTS

1. INTRODUCTION	5	5.3.2. Analogue output	18
1.1. APPLICATION	5	5.3.2.1 Output current mode	18
2. ORDER CODES	6	5.3.2.2 Output current value 4mA	18
3. TECHNICAL DATA	7	5.3.2.3 Output current value 20mA	18
3.1. GENERAL DATA	7	5.3.2.4 Output current error mode	19
3.2. ADDITIONAL DATA FOR EX APPROVED MODELS	8	5.3.2.5 Fixed output current	19
3.3. DIMENSIONS	9	5.3.3. Digital output	19
3.4. ACCESSORIES	10	HART short address	19
4. INSTALLATION AND WIRING	10	5.3.4. Service functions	20
4.1. WIRING	11	5.3.4.1 Security codes	20
4.2. CONDITIONS OF EX APPLICATION	11	5.3.4.2 Loop current test	20
5. PUTTING INTO OPERATION, PROGRAMMING	12	5.3.4.3 Temperature simulation	21
5.1. MEASURING WITH THE SAP-300 DISPLAY MODULE	13	5.3.4.4 Load default values	22
5.2. PROGRAMMING WITH THE SAP-300 DISPLAY MODULE	15	5.3.4.5 Restart	22
5.2.1. Components of the programming interface	15	5.4. ERROR CODES	23
5.2.2. Menu structure	16	5.5. RS485 COMMUNICATION VIA MULTICONT PROCESS CONTROLLER	24
5.3. PROGRAMMABLE FEATURES DESCRIPTION	17	5.5.1. Remote programming with HART protocol	24
5.3.1. Basic measurement settings	17	5.5.2. Remote programming with MODBUS protocol	25
5.3.1.1 Source of transmitted PV (Primary Value)	17	6. MAINTENANCE AND REPAIR	26
5.3.1.2 Temperature measurement unit	17	7. STORAGE	26
5.3.1.3 Damping time	17	8. WARRANTY	26
		9. MENU MAP	27

*Thank you for choosing a NIVELCO instrument.
We are sure that you will be satisfied throughout its use!*

1. INTRODUCTION


1.1. APPLICATION

THERMOPOINT TM/J-500/600 series two-wire temperature transmitters are suitable for continuous multipoint temperature-measurement, -indication and -transmission of normal and hazardous liquids, powders or granular solids. The sensor of the instrument is located in a rigid or flexible stainless steel tube, or an antistatic plastic coated steel tube depending on the measured material and the insertion length. Insertion length and process connection of the instruments are as per the order codes (see **chapter 2**). Intelligent electronics and HART communication provide application possibilities for many different tasks.

2. ORDER CODES

Not all combinations possible!

THERMOPOINT multipoint temperature transmitters:

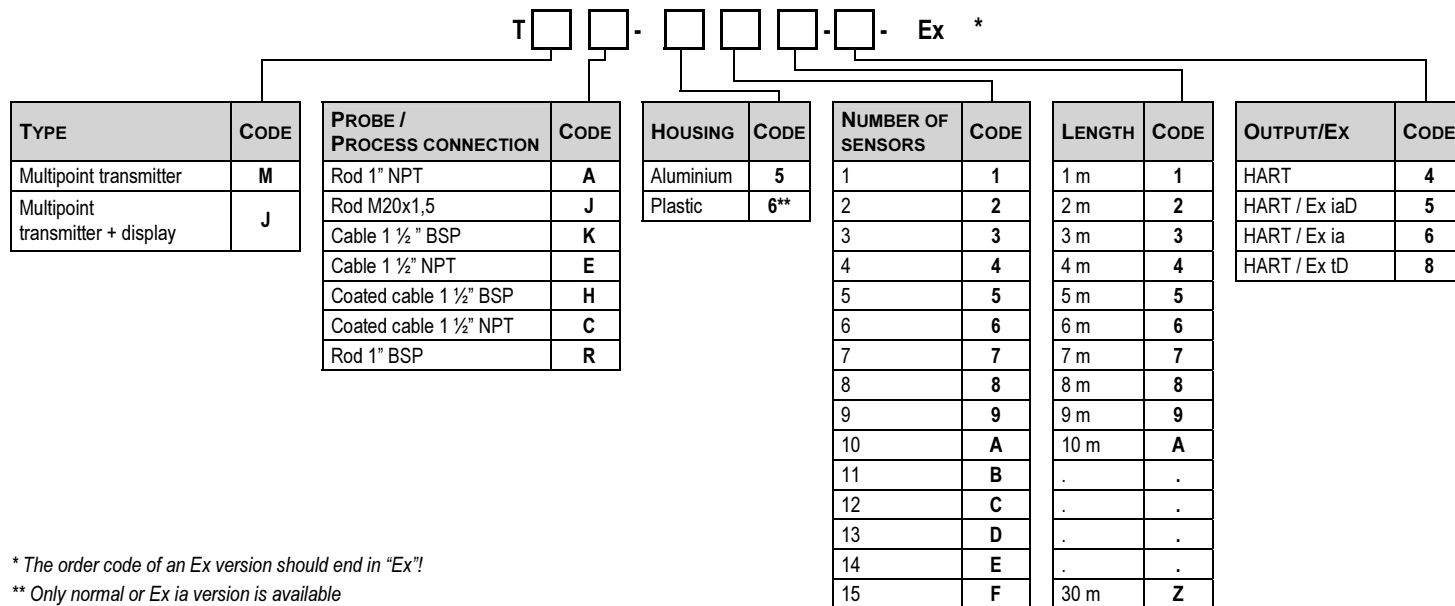




3. TECHNICAL DATA

3.1. GENERAL DATA

Type		RIGID TUBE VERSION TOR-□□□-□, TOA-□□□-□, TOJ-□□□-□	FLEXIBLE TUBE VERSION TOK-□□□-□, TOE-□□□-□	FLEXIBLE, PLASTIC COATED TUBE VERSION TOH-□□□-□, TOC-□□□-□
Nominal length		0.5 m ... 4 m	2 m ... 30 m	5 m ... 30 m
Material of the tube		Stainless steel: DIN 1.4571		Antistatic PE (CABELEC XS6114) coated steel
Max. medium pressure		2.5 MPa (25 bar)	1.6 MPa (16 bar)	0.3 MPa (3 bar)
Medium temperature		-40 °C ... +125 °C		-10 °C ... +85 °C
Measurement range		-40 °C ... +125 °C		-10 °C ... +85 °C
Resolution (digital)		0,1 °C		
Material of wetted parts		Stainless steel: DIN 1.4571		
Ambient temperature		Plastic housing : -20 °C ... +65 °C	Aluminium housing: -30 °C ... +65 °C	with SAP-300 display module: -20 °C ... +65 °C
Output	Analogue	4mA		
	Digital	HART communication (minimal loop resistance: 250 ohm)		
	Display	SAP-300 LCD		
Error indication		3.8 mA		
Output load		$R_i = (U_i - 12.5V) / 0.004 A$, U_i = power supply voltage		
Power supply		Ex type: 12.5 V ... 30 VDC Normal type: 12V....36 VDC		
Electrical protection		Class III.		
Ingress protection		IP 67		
Process connection		As per order codes		
Electrical connection		M 20 x1.5 cable gland, outer diameter of the cable: Ø 6 ...Ø12 mm, wire cross section max.1.5 mm²		
Housing		Aluminium (paint coated EN AC-42000) or plastic (PBT)		
Mass		1.7 kg + tube: 0.6 kg/m	2.9 kg + tube: 0.3 kg/m + 3 kg	2.9 kg + tube: 0.7 kg/m

3.2. ADDITIONAL DATA FOR EX APPROVED MODELS

Type	T□R-5□□-6 Ex T□R-6□□-6 Ex T□A-5□□-6 Ex T□A-6□□-6 Ex T□J-5□□-6 Ex T□J-6□□-6 Ex	T□K-5□□-6 Ex T□K-6□□-6 Ex T□E-5□□-6 Ex T□E-6□□-6 Ex	T□H-5□□-5 Ex T□C-5□□-5 Ex	T□H-5□□-8 Ex T□C-5□□-8 Ex
Ex marking	 II 1 G Ex ia IIB T6..T4		 II 1 D Ex iaD A20/A21 IP67 T85°C	 II 1 D Ex ta/tb IIIC T85°C Da IP67
Ex electrical data in case of Ex ia and iaD models	$U_{imax} = 30 \text{ V}$ $I_{imax} = 80 \text{ mA}$ $P_{imax} = 0.8 \text{ W}$ $C_i < 30 \text{ nF}$ $L_i < 100 \text{ } \mu\text{H}$			$U_{imax} < 30 \text{ V}$ $I_{imax} < 200 \text{ mA}$
Electrical protection	Class III.			
Ingress protection	IP 67			
Process connection	As per order codes			
Cable gland	M20x1.5 cable gland			
Cable diameter	Ø 7 ... 13 mm			
Electrical connection	Wire cross section: 0.5... 1.5 mm²			

3.3. DIMENSIONS

FOR SOLIDS	FOR LIQUIDS		POSITION OF SENSORS IN STANDARD VERSION*
TOH-000-0, TOC-000-0	TOK-000-0, TOE-000-0	TOR-000-0, TOA-000-0, TOJ-000-0	
<p>89</p> <p>119</p> <p>1 1/2" BSP</p> <p>1 1/2" NPT</p> <p>Insertion length as per order code</p> <p>43</p> <p>M16</p> <p>16</p>	<p>89</p> <p>119</p> <p>1 1/2" BSP</p> <p>1 1/2" NPT</p> <p>Insertion length as per order code</p> <p>43</p>	<p>89</p> <p>119</p> <p>1" BSP</p> <p>1" NPT</p> <p>M20x1,5</p> <p>12</p> <p>Insertion length as per order code</p>	<p>Number of sensors from 1 up to 15 pcs</p> <p>200</p> <p>1m</p> <p>Nominal length from 5m up to 10m</p> <p>2m</p> <p>Nominal length from 11m up to 30m</p> <p>Nominal length</p>

* Different scale is available in case of special orders

3.4. ACCESSORIES

- User's and programming manual,
- Warranty Card,
- Declaration of Conformity,
- 2 pcs M20x1.5 cable gland.

4. INSTALLATION AND WIRING

During the installation the following instructions should be taken into consideration:

- Depending on the thermal characteristics of the measured material the sensor should be installed proper distance from the silo wall,
- Depending on the cross section of the silo several sensors should be installed,
- In case of temperature measurement of granular solids static data of the silo roof should be checked and if necessary proper mechanical solution should be performed to relieve the roof.


Place of the installation should be selected to provide proper place allowing easy access for installation, calibration and monitoring.

Instruments can be equipped with flange or threaded connection according to the process connection selection.

Housing of the instrument can be rotated. After the installation turn the housing to the best position for reading display.

4.1. WIRING

- The transmitter is designed to operate in 2-wire systems with 12...30 V DC power supply voltage. Resistance of the units in the loop current depends on the applied supply voltage.
- Shielded cable should be used for wiring.
- Screw terminals can be accessed after removing the housing cover and the display module (if there is).
- The unit should be grounded by the grounding screw.
- The unit should be connected to the 3 (+U) and 4 (-U) terminals.
- Power on the instrument following the wiring. Necessary programming can be done.
- After wiring and programming ensure proper sealing and closing of the cover.

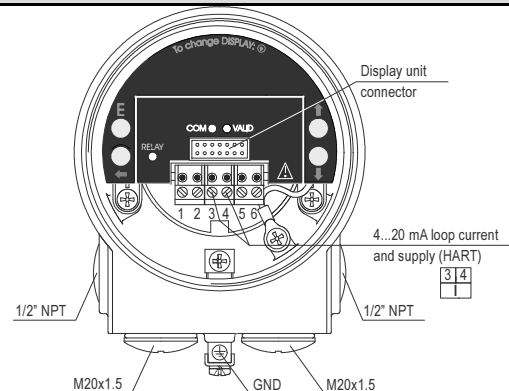

The instrument may be damaged by electrostatic discharge (ESD) via its terminal, thus apply the precautions commonly used to avoid electrostatic discharge e.g. by touching a properly grounded point before removing the cover of the enclosure.

4.2. CONDITIONS OF EX APPLICATION

- Intrinsically safe units should be powered by intrinsically safe [Ex ia IIB] certified and approved devices.
- Flameproof housing version multipoint temperature transmitters should be operated only with approved devices in accordance to the specified parameters in the technical data table.
- The instrument should be grounded by its grounding screw to the EP system.
- Heat-resistance of the cable insulation must meet the ambient temperature requirements of the application place.
- The parameters of the sealing ring in respect of chemical and flameproofness shall be observed as specified in the instruction manual.
- Multipoint temperature transmitters for solids have a measuring (medium) temperature range between -10 °C and +85 °C.
- Plastic electronic housing could be charged statically, cleaning of these units are allowed only with a wet rag.

5. PUTTING INTO OPERATION, PROGRAMMING

THERMOPOINT TM_ / TJ_-500 (600) instruments can be adjusted and programmed with SAP-300 display unit.

Without SAP-300 the following LEDs can be seen :

- **VALID** Indicates the measuring capability of the unit. If lit, the input signal is stabilised.
If blinking, the input signal is changing.
- **COM** Indicates digital (HART) communication. During Remote programming LEDs are continuously illuminated.

When SAP-300 display is present, LEDs are not visible; functions are taken over by the display. In default state SAP display shows the table of the measured temperature values (**see chapter 5.1**)

Programming is supported by a text-based menu. Navigation is done by using the \odot / \uparrow / \downarrow / \leftarrow buttons.

The instrument can operate without the SAP-300 module as well. **Programming can be done only by using SAP-300 display module locally or by HART (REMOTE PROGRAMMING) communication system remotely.**

The SAP-300 is a 64x128 dot-matrix LCD display which can be plugged into the transmitter. (Universal – usable in other NIVELCO devices as well – provided that the system software supports SAP-300.)

Warning!

The SAP-300 module is based on LCD technology, so please make sure it is not exposed to permanent heat or direct sunlight, in order to avoid damage of the display unit. If the instrument cannot be protected against direct sunlight or high temperature that is beyond the standard operating temperature range of the SAP-300, please do not leave the SAP display in the instrument.



5.1. MEASURING WITH THE SAP-300 DISPLAY MODULE

Elements of the display:

1, **Measured temperature values.** According to the increasing number from the top to the bottom and from left to right. Instrument can operate with maximum 15 sensors. 6 horizontal lines indicate the lack or the error of the sensor. The #1 sensor is the closest to the electronic housing, the following sensors are tagged with the next numbers increasingly. The last numbered sensor is at the bottom. The last measured value is indicated by inverse inscription. The device moves on the next sensor value approximately in every 1 sec.

2, **Indication of simulation.** In this case the display and output show the values of the simulation and not the measured value.

3, **Dimension of the measured values.**

4, **Indication of Menu Lock:** If key symbol is visible, the unit is protected with a password. When entering the menu, the instrument asks for the correct password. If REM message is visible, the instrument is in remote programming mode and the menu cannot be accessed.

5, **Source of transmitted PV (Primary Value).** (see 5.3.1.1)

AVG>

PV is the average of the measured temperatures.

MAX>

PV is the maximal value of the measured temperatures. In the 8th cell between brackets there is the number of the (first) sensor measuring the maximum temperature.

<01>

PV is the measured temperature of a selected sensor. The number of the selected sensor is between <> marks.

6, **Calculated value of the output current.** After the dimension, the mode of current output is indicated by inverse inscription:

M

Manual mode (see 5.3.2.1)

E !

Analogue transmission reacts to a programmed failure condition if an upper or lower fault current is programmed.


H

HART address, which is not 0, so 4mA overwrites the output current (see 5.3.3)

Any possible errors during measurement are shown in the lower part of the display.

7, **Average of measured values.**

8, **Maximum of the measured values and place (first occurrence) of the maximal value.**

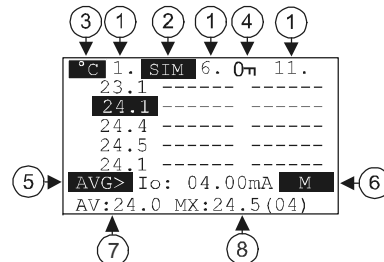




Information displays

Press  button to cycle between the information displays.

1. The general information display (DEV. INFO): overall running time (OV. RUN TIME), run time after power on (RUN TIME), type of interface (INTERFACE).
2. Sensor information: number of the temperature sensors in the probe (TOTAL SENSOR COUNT), number of the highest numbered sensor (RANGE).
3. Information of HART communication (Short address, Manufacturer ID, Device Type-code, Rx-Tx message counters – for debugging).

The informative display switches back to main screen after 30 seconds.

By pressing the  button the user can get back to main screen at any time. Pressing the  button in any of the displays the user can enter the menu. After exiting the menu always the main screen will be shown.

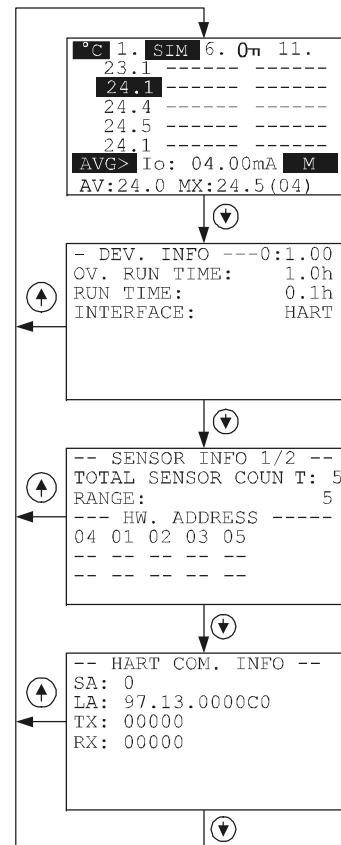

5.2. PROGRAMMING WITH THE SAP-300 DISPLAY MODULE

When entering the menu the instrument makes a copy of the actual parameters, all changes are done to this duplicated parameter set. During programming the instrument keeps measuring and transmitting with the current (and intact) parameter set. After exiting the menu the instrument replaces the original parameters with the new parameter set and will measure according to the new parameters. This means that the change of the parameters does not become immediately effective when pressing the E button!

Entering the menu can be done by pressing the E button, while exiting the menu can be done by pressing the \leftarrow button.

If the instrument is left in programming mode after 30 minutes it will automatically return to measuring mode and all changes will be unsaved. If the SAP-300 is removed, the instrument immediately exits from the menu and all changes will be unsaved.

As programming with SAP-300 (manual programming) and HART (remote mode) programming is not possible at the same time, use only one programming method at one time. Measured values can be read out through HART at any time.

5.2.1. Components of the programming interface

The parameters of the instrument are grouped according to their functions. The programming interface consists of lists, dialog windows, edit windows and report windows.

Lists


Navigation between the lines of a list can be done by pressing \uparrow / \downarrow buttons. Pressing the E button activates a list item. Selected list item is marked with inverse colour. Exit from a list by pressing the \leftarrow button.

Menu list

Menu list is a specialized list. Its characteristic is that upon selecting a list item we directly get into another list, and these lists are opening from each other in different levels. The menu header (1) helps to navigate.

Entering the menu can be done by pressing the E button. Navigation between the menu items can be done by pressing the \uparrow / \downarrow buttons. Enter to the selected menu by pressing the E button. The selected list item is marked with inverse colour.

Exit from a submenu with \leftarrow button. Pressing the \leftarrow button in the main menu will exit programming mode and the instrument will return to measuring mode.

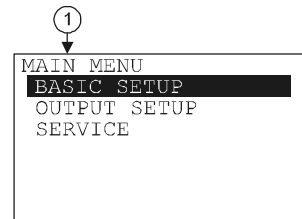

Dialog window

The system sends messages or warnings using dialog windows. These usually can be acknowledged by pressing the ⬅ button or the user can choose between two options (usually YES or NO) by pressing ⬅ / ➡ buttons. In some cases to correct an error one of the parameters has to be changed!

Edit window

An edit window is used for modifying a numeric parameter value. The selected character can be changed using the ⬆ / ⬇ buttons. The cursor can be moved to left, using the ⬅ button. The direction of the cursor movement through the digits is right to left. Changed value can be validated by pressing the Ⓔ button. The software checks if the entered value is appropriate, exiting the edit window is only possible after entering a correct value. If the entered value is uninterpretable the software sends an error message in the bottom line (1) of the display.

Edit window – button combinations


In the edit window the following button combinations are available:

- 1. Recalling the parameters to the state before editing (⬅ + ⬆, pressed for 3 secs.);
- 2. Recalling default parameters (⬅ + ⬇, pressed for 3 secs.);
- 3. Inserting (currently) measured value to the edit window (⬆ + ⬇, pressed for 3 secs.)
Only for certain parameters!

5.2.2. Menu structure

Main menu

BASIC SETUP	Parameter group of the basic measurement parameters
OUTPUT SETUP	Parameter group of the output parameters
SERVICE	Service functions, calibration, test and simulation

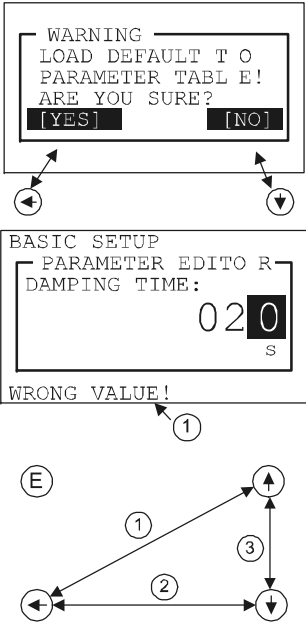

5.3. PROGRAMMABLE FEATURES DESCRIPTION

5.3.1. Basic measurement settings

5.3.1.1 Source of transmitted PV (Primary Value)

Parameter: P01: a

Menu path: BASIC SETUP / PRIMARY VALUE

Default value:

AVERAGE

Description: The selected value will be the base of the analogue and the digital (HART) transmitted Primary Value.

- AVERAGE
- SELECTED SENSOR
- MAXIMUM

All sensor data can be queried digitally, but the transmitted Primary Value can be selected in this Parameter.

5.3.1.2 Temperature measurement unit

Parameter: P02: a

Menu path: BASIC SETUP/ UNIT/ TEMPERATURE UNIT

Default value:

°C

Description: Dimension of the temperature measurement:

- °C
- °F

5.3.1.3 Damping time

Parameter: P20

Menu path: BASIC SETUP / DAMPING TIME

Default value:

0 sec

Description: Damping time is used to damp the unwanted fluctuations of the output and display.

If the measured temperature changes rapidly the new value will settle with 1% accuracy after this set time.

5.3.2. Analogue output

5.3.2.1 Output current mode

Parameter: P12: b

Menu path: OUTPUT SETUP / ANALOG OUTPUT / CURRENT MODE

Description: Transmission mode of the current output [AUTO, MANUAL]

Default value:	AUTO
----------------	------

- AUTO The output current is calculated from the Primary Value (P01: a), output is active.
- MANUAL The output current is fixed at a constant (set) value. In this mode the setting of the error current is irrelevant.
The set (current) value overwrites the 4mA output of HART multidrop mode!

5.3.2.2 Output current value 4mA

Parameter: P10

Menu path: OUTPUT SETUP / ANALOG OUTPUT / 4mA VALUE

Description: Transmitted value is assigned to 4mA output current.

Default value:	-10 (°C)
----------------	----------

The transmitted value is in accordance to the Primary Value (P01: a). The assignation can be (normal) when the change of the measured value and change of the output current are the same, or it can be reversed (inverse operation).

5.3.2.3 Output current value 20mA

Parameter: P11

Menu path: OUTPUT SETUP / ANALOG OUTPUT / 20mA VALUE

Description: Transmitted value is assigned to 20mA output current.

Default value:	+85 (°C)
----------------	----------

The transmitted value is in accordance to the Primary Value (P01: a). The assignation can be (normal) when the change of the measured value and change of the output current are the same, or it can be reversed (inverse operation).

5.3.2.4 Output current error mode

Parameter: P12: a

Menu path: OUTPUT SETUP / ANALOG OUTPUT / ERROR MODE

Default value:

22mA

Description: Error indication on the current output:

- OFF Error indication is OFF. The device transmits in accordance to the last calculation.
- 3.8 mA In case of error, the output current gets 3.8 mA.
- 22 mA In case of error, the output current gets 22 mA

Warning! This error indication is active unless the failure is fixed, or until the failure terminates! The Manual mode and the HART mode overwrites the error current.

5.3.2.5 Fixed output current

Parameter: P08

Menu path: OUTPUT SETUP / ANALOG OUTPUT / MANUAL VALUE

Default value:

4mA

Description: Parameter for setting the fixed output current.

Values between 3.8 and 20.5 can be entered. The output current will be set to the entered value and analogue transmission will be suspended. The set (current) value overwrites the 4mA output of HART multidrop mode. (see 5.3.2.1)

5.3.3. Digital output

HART short address

Parameter: P19

Menu path: OUTPUT SETUP / SERIAL OUTPUT / ADDRESS

Default value:

01

Description: HART short address

The short address can be set between 0 and 15. If there is only one device, the short address can be 0, and this case the device transmits 4-20mA on its output. In Multidrop (if there are more than one device) mode short address should differ from zero, and this case the output current is fixed to 4mA. The fixed 4mA output can be overwritten as described in chapter 5.3.2.5.

5.3.4. Service functions

5.3.4.1 Security codes

User security code

Parameter: --
Menu path: SERVICE / SECURITY / USER LOCK
Description: Setting or unlocking the user security code.
The instrument can be protected against unauthorized programming with a 4 digit PIN (Personal Identification Number) code. If either of the digits differs from 0 the code is active. If zero is specified, then the secret code has been deleted!
In case of Active code, this code is requested at menu entry.

Service code

Parameter: --
Menu path: SERVICE / SECURITY / SERVICE LOCK
Description: Setting of the service code (only for trained personnel!)

5.3.4.2 Loop current test

Parameter: P80
Menu path: SERVICE / OUTPUT TEST / ANALOG OUTPUT
Description: Loop current test (mA)
Entering to this parameter the display and the output show the current value according to the actual measured value. In test mode values between 3.9 and 20.5 can be entered into this parameter. The output current will be set to the entered value. The measured current on the output should be equal to the set value.
In test mode a dialog window warns the user of the fixed output current until the user exits the warning message window. Exiting can be done by pressing the Ⓔ button.

5.3.4.3 Temperature simulation

This function helps the user to check the outputs and the connected processing units

After finishing of the settings the unit should be returned into Measurement mode to start the simulation.

Temperature simulation mode


Parameter: P84: a

Menu path: SERVICE / PV SIMULATION / MODE

Default value:

0

Description: Simulation mode:

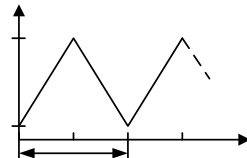OFF	No PV simulation	
FIX VALUE	Simulation value is according to the sum of the bottom value of the simulation and the number of the sensor	
TRIANGLE WAVE	The simulated value changes linearly between the set low and high values with an adjustable cycle time	 PV: Primary Value
SQUARE WAVE	The simulated value jumps between the set low and high values with an adjustable cycle time	

Temperature simulation cycle

Parameter: P85

Menu path: SERVICE / PV SIMULATION / TIME

Default value:

60 sec

Description: Cycle time of the simulation

Bottom value of the Temperature simulation

Parameter: P86

Menu path: SERVICE / PV SIMULATION / BOTTOM VALUE

Default value:

-10 °C

Description: Lowest value of the simulation

Upper value of the Temperature simulation

Parameter: P87
Menu path: SERVICE / PV SIMULATION / UPPER VALUE
Description: Highest value of the simulation

Default value:	85 °C
----------------	-------

5.3.4.4 Load default values

Parameter: --
Menu path: SERVICE / DEFAULTS / LOAD DEFAULT
Description: This command loads all default values of the instrument.
After loading the default values the parameters can be freely changed, the effect of the changes does not affect the measurement until the user exits programming mode and returns to measurement mode. Before loading the defaults the software asks for a confirmation warning the user that all user parameters will be lost!

5.3.4.5 Restart

Parameter: --
Menu path: SERVICE / RESTART
Description: Restarts the instrument (Cold boot) (Reloads parameters from the non-volatile memory)

5.4. ERROR CODES

Message on the screen	Error description	Procedure
MEMORY ERROR	Memory error in the electronics	Contact the service!
NO INPUT SIGNAL	Hardware error	Contact the service!
EE COM. ERROR	Hardware error	Contact the service!
MATH. OVERLOAD	Display overflow	Check the programming!
SENSOR NOT FOUND	Hardware error	Contact the service!
SENS. ZERO ADDR.	Hardware error	Contact the service!
SENS. MULT. ADDR.	Hardware error	Contact the service!
SENS. MISS. ADDR.	Hardware error	Contact the service!
SENS. SHORT CIRC.	Hardware error	Contact the service!
EE CHK ERROR	Parameter checksum error	Restart the unit in SERVICE / RESTART menu (or power off and on the instrument) and check / repeat programming! If the problem persists contact the service!
INTEGRITY ERROR	Incorrect parameter values. Stored parameters are damaged.	Restart the unit in SERVICE / RESTART menu (or power off and on the instrument) and check / repeat programming! If the problem persists contact the service!
AC COM. ERROR	Hardware error	Contact the service!

5.5. RS485 COMMUNICATION VIA MULTICONT PROCESS CONTROLLER

5.5.1. Remote programming with HART protocol

Knowing the HART commands of the transmitters, with the help of USER RS485 interface of MultiCONT process controller (this case MultiCONT acts as a bridge) there is a possibility to perform remote programming of the connected transmitters. This can be done the following way:

- the MASTER inserts the HART frame to the data field of the HART frame, which is sent by the MultiCONT to the transmitters
- the MultiCONT „unpack” the HART frame and sent to the transmitter
- the MultiCONT „pack” the HART answer of the transmitter and send it o the MASTER in the data field of the HART frame

Detailed description of the remote programming can be found in „USER RS485 protocol for MultiCONT” programming manual.

MASTER→MultiCONT:

PA	SD	AD	CD=241 (F1h)	BC=2	CSD=232 (E8h)	Index	FCS
----	----	----	----------------	------	-----------------	-------	-----

MultiCONT→MASTER (answer)

BYTE NUMBER	NAME	DATA TYPE	NOTE
0...3	MultiCONT status	Bit32	
4	CSD: sub-command code	Unsigned 8	
5	Index : list number of the transmitter	Unsigned 8	Index=0...Dn-1 (see 6.2.5.7. chapter)*
6	Number of sensors in a probe (1..15)	Unsigned 8	
7	Dimension	Unsigned 8	°C or °F
8..37	Sensor temperatures *10 S1..S15 in order	Signed int 16	
38..39	Max. temperature in a probe (PV)	Float	
40...42	Date of last table refresh	Date	
43..45	Time of last table refresh	Time	

This chapter is in the „Description of the USER RS485 protocol for MultiCONT” programming manual.

5.5.2. Remote programming with MODBUS protocol

Knowing the HART commands of the transmitters, with the help of USER RS485 interface of MultiCONT process controller (this case MultiCONT acts as a bridge) there is a possibility to perform remote programming of the connected transmitters. This can be done the following way:

- the MASTER inserts the HART frame to the data field of the MODBUS frame, which is sent by the MultiCONT to the transmitters
- the MultiCONT „unpack“ the HART frame and sent to the transmitter
- the MultiCONT „pack“ the HART answer of the transmitter and send it o the MASTER in the data field of the MODBUS frame

Detailed description of the remote programming can be found in „USER RS485 protocol for MultiCONT“ programming manual

Request: MASTER→MultiCONT:

ADDR	FNC=03h	START	QUANTITY		CRC	
		7000h+N*0040h+00..36h	HI=00h	LO=00h...37h	HI	LO

N=0...Dn-1, where Dn is the number of HART devices (see: Table of system variables: 0012h address)

BYTE NUMBER	NAME	DATA TYPE	NOTE
7000h	Number of sensors in a probe (1..15)	Unsigned 16	
7001h	Dimension	Unsigned 16	°C or °F
7002h	S1 Sensor temperatures *10	Signed Int	
7003h	S2 Sensor temperatures *10	Signed Int	
7004h	S3 Sensor temperatures *10	Signed Int	
7005h	S4 Sensor temperatures *10	Signed Int	
7006h	S5 Sensor temperatures *10	Signed Int	
7007h	S6 Sensor temperatures *10	Signed Int	
7008h	S7 Sensor temperatures *10	Signed Int	
7009h	S8 Sensor temperatures *10	Signed Int	
700ah	S9 Sensor temperatures *10	Signed Int	
700bh	S10 Sensor temperatures *10	Signed Int	
700ch	S11 Sensor temperatures *10	Signed Int	
700dh	S12 Sensor temperatures *10	Signed Int	
700eh	S13 Sensor temperatures *10	Signed Int	
700fh	S14 Sensor temperatures *10	Signed Int	
7010h	S15 Sensor temperatures *10	Signed Int	
7011h	MAX Sensor temperatures *10	Signed Int	
7012h	Date of last table refresh	Date	
7014h	Time of last table refresh	Time	

6. MAINTENANCE AND REPAIR

The unit does not require routine maintenance. Repairs during or after the warranty period are carried out exclusively at the Manufacturer's.


7. STORAGE

Ambient temperature:	-25 °C ...+60 °C
Relative humidity:	max. 98%

8. WARRANTY

NIVELCO provides warranty of 3 (three) years in compliance with details described in the Warranty Card.

9. MENU MAP

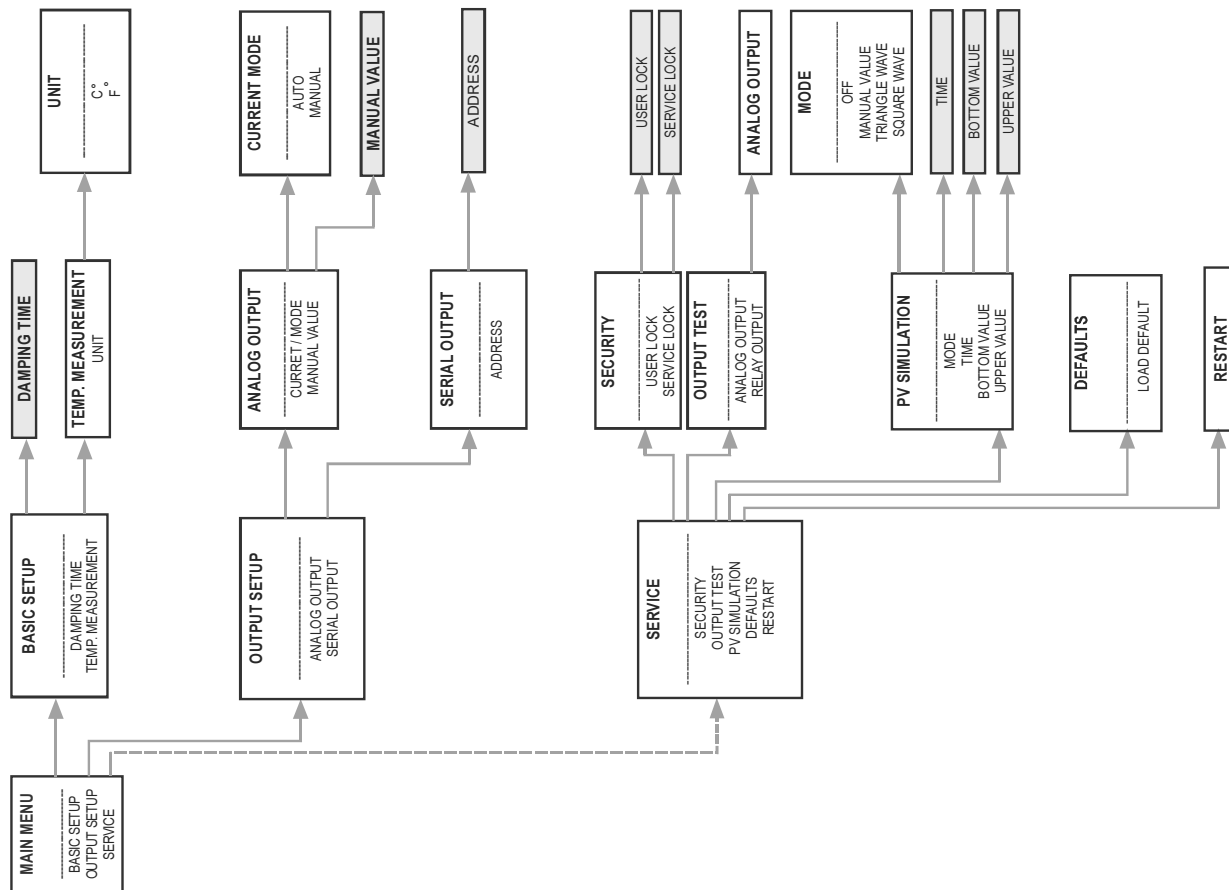

tmh5554a0600p_03.doc
September 2012.
Nivelco reserves the right to change technical
specifications without notice.